




Trumatic E 2400

E 2400 Warmluftverteilung

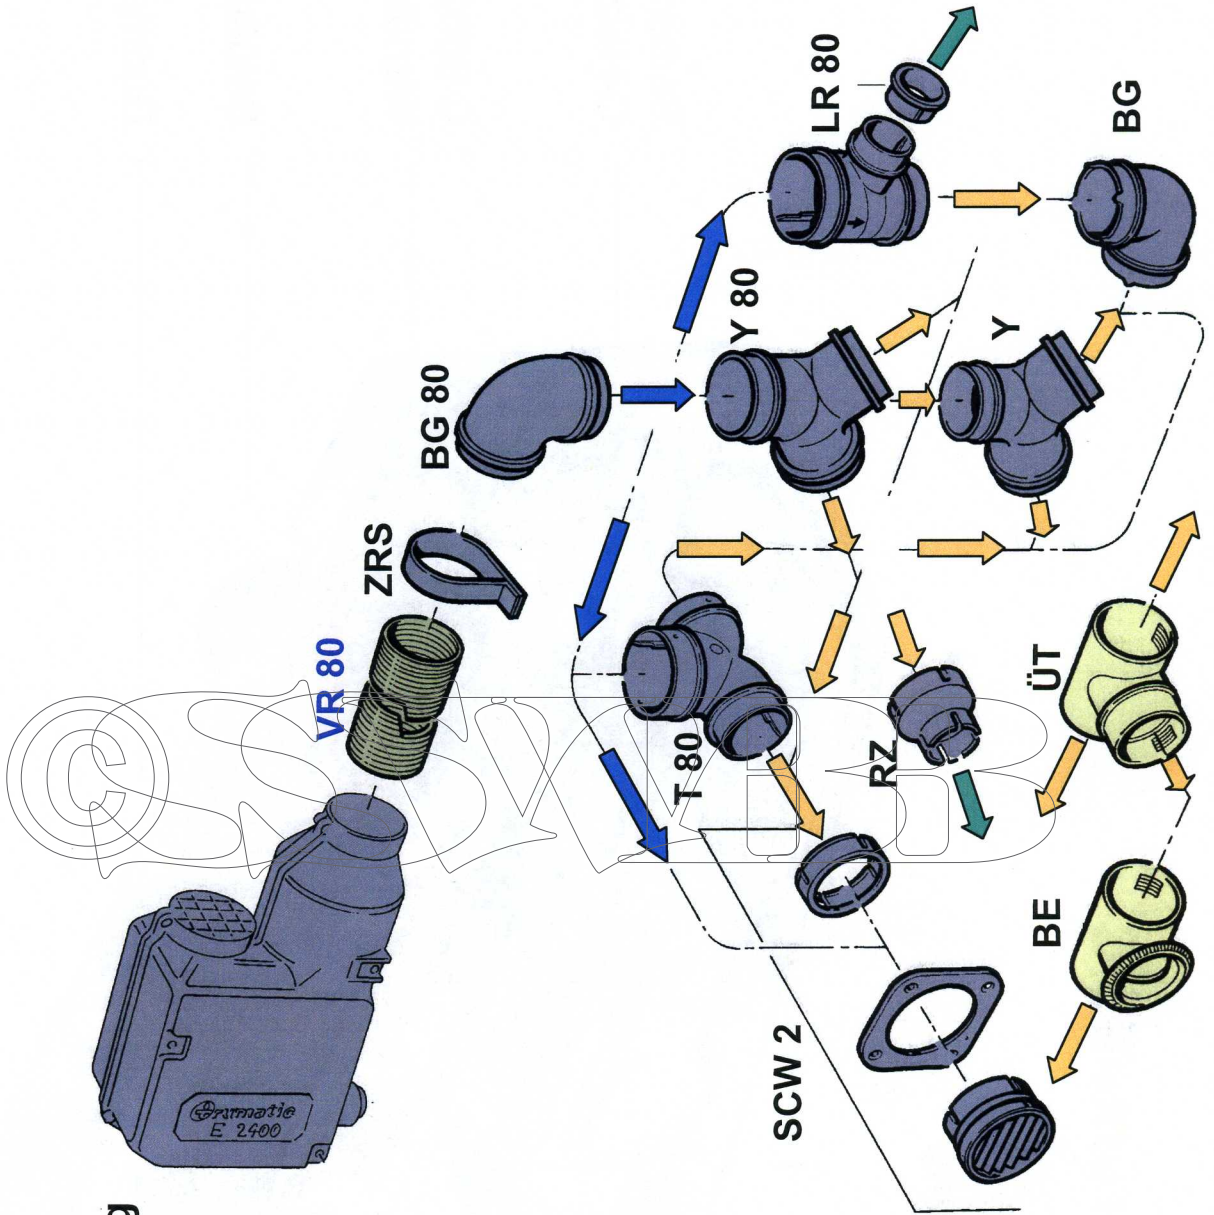

VR 80 ↑

VR 72 ↑
ÜR 65 ↑

ZR 18 ↑